- The 203 mm and 180 mm rotors provide a higher braking force than the 160 mm rotors. Make
- sure that you have a complete feel for the braking characteristics before using the brakes.
 Please use extra caution to keep your fingers away from the rotating disc brake rotor during installing or servicing the wheel. The rotor is sharp enough to inflict severe injury to your fingers if caught within the openings of moving
- The calipers and rotor will become hot when the brakes are operated, so do not touch them while riding or immediately after dismounting from the bicycle, otherwise you may get burned. Check that the brake components have cooled down sufficiently before attempting to adjust the
- brakes.

 The required braking distance will be longer during wet weather. Reduce your speed and apply the brakes early and gently.
- If the road surface is wet, the tires will skid more easily. If the tires skid, you may fall off the
- Note that the first that the front and rear brakes are working correctly before you ride the halves are working correctly before you ride the first that the front and rear brakes are working correctly before you ride the bicycle.

 • If the rotor is cracked or warped, be sure to replace it with a new rotor.
- If the rotor becomes worn down to a thickness of 1.5 mm or so that the aluminum surface
- becomes visible, be sure to replace the rotor with a new one.
- pads. If any oil or grease gets on the rotor, you should clean the rotor. If this is not done, the brakes may not work correctly.
- Before riding the bicycle, check that the thickness of each pad is 0.5 mm or
- Vapor lock may occur if the brakes are applied continuously. To relieve this condition, momentarily release the lever

Vapor lock is a phenomenon in which the oil inside the brake system becomes heated, which causes any water or air bubbles inside the brake system to expand. This can then result in a sudden increase in the brake lever stroke.

- Use only genuine Shimano mineral oil. If other types of oil are used, it may cause problems
- Use only genuine Shirnaho mineral oil. If other types of oil are used, it may cause problems with brake operation, and cause the system to be unuseable.
 Be sure to use only oil from a freshly-opened container, and do not re-use oil which has been drained from the bleed nipple. Old oil or already-used oil may contain water which could cause vapor lock in the brake system.
 Be careful not to let water or air bubbles get into the brake system, otherwise vapor locks may
- occur. Be particularly careful when removing the bleed screws.

 If cutting the brake hose in order to adjust the length of the hose, or when changing over the brake hose from left to right or vice versa, be sure to bleed the air from the hose by carrying out steps (4), (8) to (12) given in "Adding mineral oil and bleeding air" in the Service legistrations.
- When turning the bicycle upside down or on its side, the brake system may have some air bubbles inside the reservoir tank which are still there when the bleed screws are replaced, or which accumulate in various parts of the brake system when it is used for long periods. This disc brake system is not designed to be turned upside down. If the bicycle is turned upside down or on its side, the air bubbles inside the reservoir tank may move in the direction of the calipers. If the bicycle is ridden in this condition, there is the danger that the brakes may not operate and a serious accident could occur. If the bicycle has been turned upside down or on its side, be sure to operate the brake lever a few times to check that the brakes operate nally before riding the bicycle. If the brakes do not operate normally, adjust them by the
- < If brake operation is sluggish when the lever is depressed >
- Gently depress the brake lever several times and wait for the bubbles to return to the reservoir tank. It is recommended that you then remove the bleed screws and fill the reservoir tank with mineral oil until no air bubbles remain.

 If the brakes still operate sluggishly, bleed the air from the brake system. (Refer to "Adding"
- the mineral oil and bleeding air".)
- If fluid leaks occur, immediately stop using the brakes and carry out the appropriate repairs. If you continue riding the bicycle while fluid is leaking, there is the danger that the brakes may suddenly stop working.

 If the quick release lever is on the same side as the rotor, there is the danger that it may
- interfere with the rotor, so check that it does not interfere.
- It is important to completely understand the operation of your bicycle's brake system. Improper use of your bicycle's brake system may result in a loss of control or an accident, which could lead to severe injury. Because each bicycle may handle differently, be sure to learn the proper braking technique (including brake lever pressure and bicycle control characteristics) and operation of your bicycle. This can be done by consulting your professional bicycle dealer and the bicycle's owners manual, and by practicing your riding and braking technique
- If the front brake is applied too strongly, the wheel may lock and the bicycle may fall forward,
- Shimano disc brake systems are not compatible with tandem bicycles. Because tandem bicycles have a high overall weight, the load on the brake system increases during brake. operation. If hydraulic disc brakes are used with tandem bicycles, the oil temperature will become too high and vapor locks or ruptures in the brake hoses may occur, and this will cause
- Obtain and read the service instructions carefully prior to installing the parts. Loose, worn or damaged parts may cause the bicycle to fall over and serious injury may occur as a result. We strongly recommend only using genuine Shimano replacement parts.
- Read these Technical Service Instructions carefully, and keep them in a safe place for later

▲ CAUTION

 G01A G01S F01A brake pads are designed to reduce the amount of noise which is generated. between the pads and the rotor when the brakes are operated. A longer running-in per required for this type of pad compared to G03S/F03C pads.

■ Handling the mineral oil

- Use safety glasses when handling, and avoid contact with eyes. Contact with eyes may result in
- In the event of eye contact, flush with fresh water and seek medical assistance immediately.

 Use gloves when handling. Contact with skin may cause a rash and discomfort.

 In the event of skin contact, wash well with soap and water.

Technical Service Instructions

SI-8JZ0A-004

SM-DB-OIL

With fins

Disc Brake System

Brake pad unit

Resin Pads

In order to realize the best performance, we recommend that the following

combination be used.			
Caliper	BR-M785 / BR-S700 * / BR-M666		
Brake Lever	BL-M785 / BL-T785 BL-S700 / BL-M666		
Rotor	SM-RT81 / RT67		
Hose	SM-BH90-SB		
Cable Supporter	SM-HANG		

Metal Pads	G03S	F03C
* The BR-S700 is for use wonly.	with resin pads (GC	1A, G01S, F0

Without fins

G01A / G01S F01A

- Inhalation of oil mist or vapors may cause nausea. Cover nose and mouth with a respirator type mask and use in a well ventilated area.

 If mist or vapor is inhaled, go immediately to an area with fresh air. Cover up with a blanket. Stay warm and stable and seek professional medical advice.
- · Do not drink. May cause vomiting or diarrhea.
- Keep out of reach of children.
- Do not cut, heat, weld or pressurize the oil container, as this may cause
- Disposal of Used Oil : Follow local county and/or state codes for disposal. Use
- care when preparing oil for disposal.

 Directions : Keep the container sealed to prevent foreign objects and moisture from getting inside, and store it in a cool, dark area away from direct sunlight or heat.

Disc brakes have a burn-in period, and the braking force will gradually increase as the burn-in period progresses. Make sure that you are aware of any such increases in braking force when using the brakes during the burn-in period. The same thing will happen when the brake pads or rotor are replaced.

■ When cleaning with a compressor

If disassembling the caliper body to clean the internal parts using a compressor, note that moisture from the compressed air may remain on the caliper components. Let the caliper components dry sufficiently before reassembling the

Note

- The 203 mm and 180 mm rotors have a larger diameter than the 160 mm rotors for cross-country bicycles, and so the flexing of these rotors is greater. As a result, they will interfere with the brake pads.
- · If the brake caliper mounting boss and the dropout are not parallel, the rotor and caliper may touch.
- When the bicycle wheel has been removed, it is recommended that pad spacers should be installed. The pad spacers will prevent the piston from coming out if the brake lever is depressed while the wheel is removed.
 If the brake lever is depressed without the pad spacers installed, the pistons will
- protrude further than is normal. Use a flat-tipped screwdriver or similar tool to push back the brake pads, while being careful not to damage the surfaces of the brake pads. (If the brake pads are not installed, use a flat-shaped tool to push the pistons straight back in, while being careful not to damage them.)

 If it is difficult to push the brake pads or pistons back, remove the bleed screws and then try again. (Note that some oil may overflow from the reservoir tank at
- Use isopropyl alcohol, soapy water or a dry cloth when carrying out cleaning and maintenance of the brake system. Do not use commercially-available bral cleansers or silencing agents, as they can cause damage to parts such as
- Do not remove the pistons when disassembling the calipers.
- Parts are not guaranteed against natural wear or deterioration resulting from • For maximum performance we highly recommend Shimano lubricants and

maintenance products.

The following tools are needed to assemble this product.

Usage location	Tool		
Rotor fixing lock ring	TL-LR15		
Brake lever fixing bolt	Allen key 4 mm		
Caliper fixing bolt	Allen key 5 mm		
Adapter (post type) fixing bolt	Allen key 5 mm		
Brake pad fixing shaft	Allen key 3 mm / Radio pliers		
Brake lever bleed screw	Allen key 2.5 mm		
Cable supporter	Phillips screwdriver #2		
Brake hose fixing bolt	8 mm wrench / Allen key 3 mm, 4 mm		
Bleed nipple	7 mm socket wrench		
Bleeding	SM-DISC, Syringe		

 
■ Wheel spoke lacing

Check that the spokes have been laced as shown in the illustration. A radial assembly cannot be used.

Lace the spokes as shown in Figure 1 below for the left side of the front wheel (the side where the rotor is installed), and the left and right sides of the rea wheel, and as shown in Figure 2 below for the right side of the front wheel

Rotating direction of	Front left Re	ear left	Rear right	Front rig	ght
wheel					
		60	Fig. 1		Fig. 2


■ Installation of the rotor



■ Installation of the brake lever

Secure the brake lever as shown in the illustration. (Check that the brake lever does not interfere with the shifting lever during operation. Refer to the Service Instructions for the shifting lever also. Some types might require the shifting lever to be installed first, due to the position of the shifting


When installing the components to carbon frame/handle bar surfaces, verify with the manufacturer of the carbon frame/parts for their recommendation on tightening torque in order to prevent over tightening that can cause damage to the carbon material and/or under tightening that can cause lack of fixing strength for the components.

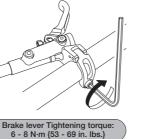


■ Installation of the hose

Refer to the Service Instructions for the SM-BH90-SB brake hose (SI-8 IA0A) for details on


Do not let the hose become twisted when installing. Make sure that the calipers and levers are in the positions shown in the illustrations.

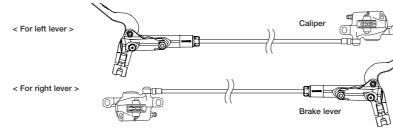

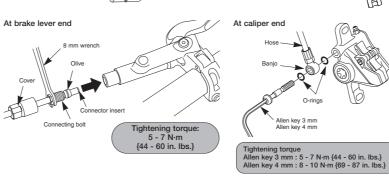

■ Installation of the calipers and securing the hose.


- Remove the spacer for bleeding (yellow), and then set the wheel which has the rotor onto the frame.

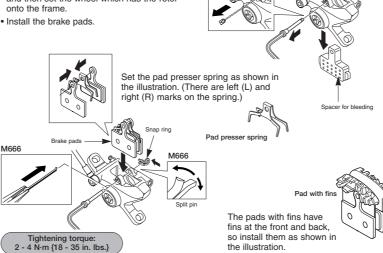

For international-standard mounts, attach adapters to calipers for post-type mounts. (Separate front and rear adapters are available.)


- 1. First install the adapter, and then provisionally secure the calipers to the frame. (The calipers should be able to move sideways.)
- 2. Depress the brake lever so that the rotor is being clamped by the pads, and then tighten the

International standard mounting type

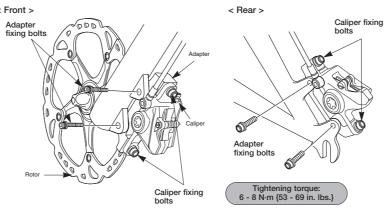

 Post mounting type Provisionally install the caliper to the frame (so that the caliper can move sideways), depress the brake lever so that the rotor is being clamped by the pads, and then tighten the caliper fixing bolts

Install the accessory caps as shown in the illustration to prevent the bolts from loosening.

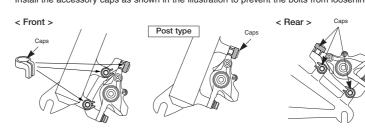


For C-shaped guides and the usual < C-shaped guide > < Usual type of cable stopper type of cable stoppers, use the special Shimano cable supporter (sold separately) to secure as

7 Tightening torque: 0.3 - 0.5 N·m {2.7 - 4.4 in. lbs.}

Operate the brake lever several times and check whether the brakes operate normally or not. Also check that there are no oil leaks visible

Note: This brake system is designed so that as the brake pads become worn, the pistons gradually move outward to automatically adjust the clearance betwee the rotor and the brake pads. Therefore, you need to push the pistons back to their original positions when replacing the brake pads

If oil adheres to the brake pads after oil is added, or if the brake pads are worn down to a thickness of 0.5 mm, or if the brake pad presser springs are interfering with the rotor, replace the brake pads.

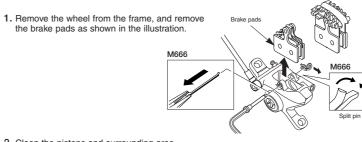


2. Clean the pistons and surrounding area

3. Use a flat-shaped tool to push the pistons straight back in as far as they will go, while being careful not to twist the pistons. Do not push the pistons with a sharp tool. The pistons may become damaged

4. < BR-M785/S700 > Install the new brake pads, and then install the pad spacers (red). Make sure that you o not forget to install the snap rings at

< BR-M666 > Install the new brake pads, and then install the pad spacers (red). After this, bend open the split pin.

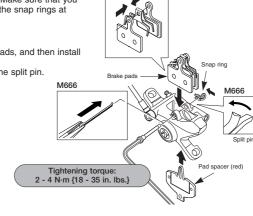

- 5. Depress the brake lever several times to check that the operation becomes stiff.
- 6. Remove the pad spacers, install the wheel, and then check that there is no interference between the rotor and the caliper. If they are touching, adjust while referring to "Installation of the caliper"


■ Adjustment when the pistons are not operating correctly

The caliper mechanism includes two pistons. If these pistons do not operate properly or if they protrude unevenly, or if the brake pads remain in contact with the rotor, adjust the pistons by the following procedure.

- 1. Remove the wheel and the brake pads. Clean the pistons and surrounding area.
- 2. Use a flat-shaped tool to push the pistons straight back in as far as they will go, while being careful not to twist the pistons. Do not push the pistons with a sharp tool. The pistons may become damaged
- 3. Install the brake pads and the pad spacers (red).
- ${\bf 4.}$ Depress the brake lever as far as it will go, and then operate it several more times so that the two pistons all move to their initial positions.
- Remove the pad spacer, install the wheel, and then check that there is no interference between the rotor and the brake pads. If they are touching, loosen the installation bolts and adjust so that they are no longer touching.

■ Reach adjustment


Tighten the adjust bolt (clockwise) to increase the stroke, and loosen it ockwise) to decrease the stroke

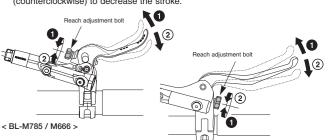

< BL-T785 / S700 >

■ Free stroke adjustment

When the free stroke adjustment screw is loosened, the free stroke of the brake lever will increase, so that you can adjust it to the desired setting

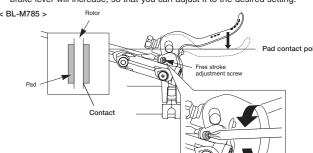

■ Mineral oil replacement

It is recommended that you replace the oil inside the reservoir tank if it becomes


Attach a tube with a bag to the bleed nipple, and then open the bleed nipple and drain out the oil. You can operate the brake lever at this time to help the oil to drain out. After draining the fluid, pour in fresh brake fluid while referring to "Adding the mineral oil and bleeding air". Use only genuine Shimano mineral oil. Dispose of the waste oil according to proper country and/or state disposal

Refer to the "Adding the mineral oil and bleeding air" and "Adding the mineral oil and bleeding air (when using the caliper bleed screw)" Service Instructions in conjunction with these Service Instructions.

■ Installation of the SL-M780-I and the BL-M785/T785/S700/M666

1. Use a 2 mm Allen key to open the clamp band of the brake lever as shown in the illustration.

2. Insert the hook of the shifting lever bracket into the hole in the brake lever bracket, and then provisionally tighten the special nut and

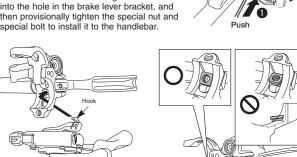

Do not install the nut upside-down. If it is installed upside-down, it will not be possible to secure the brake lever to the handlebars, and damage may occur.

3. Use a 4 mm Allen key to secure the

4. Use a 4 mm Allen key to secure the clamp



This service instruction explains how to use and maintain the Shimano bicycle parts

which have been used on your new bicycle.

For any questions regarding your bicycle or other matters which are not related to Shimano parts, please contact the place of purchase or the bicycle manufacturer.

SHIMANO

SHIMANO EUROPE B.V.
Industriowea 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222 SHIMANO INC.

* Service Instructions in further languages are available at

http://techdocs.shimano.com

Please note: specifications are subject to change for improvement without notice. (English) © Nov. 2011 by Shimano Inc. XBC SZK