



**A**

Abbreviation .....	2
ABS (Anti-lock Brake System) .....	7-33
Warning light .....	3-18
Access key .....	2-10
Warning indicator .....	3-24
Accessories.....	5-2, 11-39
Accessory power outlet.....	6-9
Air cleaner element .....	11-15
Air conditioner	
Automatic climate control system .....	4-5
Manual climate control system.....	4-6
Air filtration system.....	4-10
Airflow selection.....	4-6
Alarm system .....	2-27
All-Wheel Drive warning light.....	3-21
Aluminum wheel .....	11-31
Cleaning .....	10-3
Antenna system.....	5-2
Anti-lock Brake System (ABS) .....	7-33
Arming the system .....	2-28
Armrest.....	1-15
Ashtray .....	6-11
AT OIL TEMP warning light .....	3-16
Audio	
Antenna system.....	5-2
Set.....	5-3
Auto on/off headlights .....	3-42
Sensor.....	3-44
Auto-dimming mirror .....	3-54
Automatic climate control system .....	4-5

**Automatic headlight beam leveler**

Warning light.....	3-29
Automatic/Emergency Locking Retractor (A/ELR) .....	1-17

**B****Battery**

Drainage prevention function.....	2-8
Jump starting .....	9-11
Replacement (access key).....	11-49
Replacement (remote engine start transmitter) .....	7-21
Replacement (transmitter).....	11-50
Vehicle battery .....	11-36
Booster seat .....	1-34
Bottle holder .....	6-9
Brake	
Assist.....	7-32
Booster .....	7-32, 11-21
Disc .....	12-9
Fluid .....	11-19, 12-8
Pad .....	11-23
Parking .....	7-42
Pedal .....	11-22
System.....	7-32
Brake pedal	
Free play .....	11-22
Reserve distance.....	11-22
Brake system .....	7-32
Warning light.....	3-19
Braking .....	7-32
Tips .....	7-32
Breaking-in of new brake pads .....	11-23

Bulb	
Chart.....	12-14
Replacing.....	11-39
C	
Cargo area	
Cover .....	6-15
Light.....	6-3, 11-48
Tie-down hooks .....	6-18
Catalytic converter .....	8-3
Center	
Console .....	6-6
Changing	
Coolant.....	11-15
Flat tire.....	9-5
Oil and oil filter .....	11-13
Charge warning light .....	3-15
CHECK ENGINE warning light/Malfunction indicator light.....	3-15
Checking	
Brake pedal free play .....	11-22
Brake pedal reserve distance .....	11-22
Clutch function.....	11-22
Clutch pedal free play.....	11-23
Coolant level .....	11-14
Fluid level (brake fluid) .....	11-19
Fluid level (clutch fluid) .....	11-20
Fluid level (washer fluid) .....	11-31
Oil level (engine oil) .....	11-11
Child restraint systems .....	1-27
Installation of a booster seat.....	1-34

Installation with A/ELR seatbelt .....	1-30
Lower and tether anchorages.....	1-35
Top tether anchorages .....	1-38
Child safety .....	4
Locks.....	2-32
Chime	
Key.....	3-4
Light .....	3-42
Seatbelt.....	3-12
Cleaning	
Aluminum wheels .....	10-3
Interior .....	10-5
Ventilation grille.....	4-9
Climate control system..	4-3
Automatic .....	4-5
Manual.....	4-6
Clock .....	3-31
Clutch	
Fluid .....	11-20, 12-8
Pedal .....	11-22
Coat hook.....	6-12
Console .....	6-6
Continuously variable transmission (CVT).....	7-25
Fluid .....	11-19, 12-8
Oil temperature warning light (AT OIL TEMP).....	3-16
Coolant .....	11-14, 12-8
Cooling system .....	11-14
Corrosion protection.....	10-4
Crossbars.....	8-14
Cruise control .....	7-49
Indicator .....	3-29

Set indicator .....	3-29
Cup holder .....	6-7
Front passenger's .....	6-8
Rear passenger's.....	6-8
<b>D</b>	
Daytime running light system.....	3-45
Defogger.....	3-52
Defrosting .....	4-9
Deicer .....	3-52
Differential gear oil	
Front .....	11-19, 12-7
Rear.....	11-19, 12-7
Dimensions .....	12-2
Disarming the alarm system .....	2-31
Disc brake pad wear warning indicators .....	7-33
Dome light .....	6-2, 11-47
Door	
Locks .....	2-6
Open indicator light .....	3-21
Step light .....	11-47
Double trip meter .....	3-9
Drive belts.....	11-18
Driving	
All-Wheel Drive warning light.....	3-21
AWD vehicles.....	8-5
Car phone/cell phone .....	6
Drinking .....	5
Drugs .....	6
Foreign countries .....	8-4
Off road .....	8-6

Pets.....	7
Snowy and icy roads .....	8-10
Tips .....	7-24, 7-30, 8-2, 8-5
Tired or sleepy .....	6
Winter .....	8-8

**E**

ECO gauge .....	3-11
Electrical system .....	12-9
Electronic Brake Force Distribution (EBD) system.....	7-34
Warning .....	3-20
Electronic parking brake .....	7-42
Automatic release function by accelerator pedal .....	7-44
Hill Holder .....	7-44
Warning .....	3-20, 7-46
Emergency Locking Retractor (ELR) .....	1-17
Engine	
Compartment overview.....	11-9
Coolant .....	11-14, 12-8
Exhaust gas (carbon monoxide) .....	5, 8-2
Hood .....	11-7
Low oil level warning indicator.....	3-16
Oil .....	11-11, 12-4
Overheating .....	9-13
Starting & stopping .....	7-9, 7-12
Event data recorder .....	8
Exterior care .....	10-2

**F**

Flat tires.....	9-5
Floor mat.....	6-14

Fluid level	
Brake	11-19
Clutch	11-20
Continuously variable transmission	11-19
Fog light	
Bulb	11-41, 12-14
Indicator light	3-30
Steering responsive fog lights system	3-47
Switch	3-47
Front	
Differential gear oil	11-19, 12-7
Seatbelt pretensioners	1-24
Side marker light	11-41
Turn signal light	11-41
Front seats	1-2
Forward and backward adjustment	1-4
Head restraint adjustment	1-8
Memory function	1-5
Power seat	1-5
Reclining	1-4
Seat height adjustment (driver's seat)	1-4
Fuel	7-3
Consumption indicator	3-35
Economy hints	8-2
Filler lid and cap	7-4
Gauge	3-10
Requirements	7-3, 12-3
Fuses	11-37
Fuses and circuits	12-10

<b>G</b>	
GAWR (Gross Axle Weight Rating)	8-14
Glove box	6-6
GVWR (Gross Vehicle Weight Rating)	8-14
<b>H</b>	
Hazard warning flasher	3-7, 9-2
Head restraint adjustment	
Front seat	1-8
Rear seat	1-14
Headlight	
Beam leveler	3-45
Bulb wattage	12-14
Control switch	3-42
Flasher	3-44
Indicator light	3-30
Welcome lighting function	3-43
High beam indicator light	3-29
High/low beam change (dimmer)	3-44
Hill descent control	7-39
Indicator	3-30
Hill Holder	
Indicator light	3-21
Switch	7-45
Hill start assist	
To activate/deactivate	7-48
HomeLink®	3-54
Hook	
Coat	6-12
Convenient	6-14
Convenient tie-down	6-18

Shopping bag .....	6-13
Towing and tie-down.....	9-14
Horn.....	3-67
Hose and connections .....	11-14
<b>I</b>	
Ignition switch.....	3-3
Light.....	3-4
Illumination brightness control.....	3-46
Immobilizer.....	2-4
Indicator light (security indicator light) .....	3-28
Indicator light	
Cruise control .....	3-29
Cruise control set.....	3-29
Door open.....	3-21
Front fog light .....	3-30
Headlight .....	3-30
High beam .....	3-29
Hill descent control.....	3-30
Hill Holder .....	3-21
Immobilizer.....	3-28
Security .....	3-28
Select lever/Gear position .....	3-29
Steering responsive fog lights OFF.....	3-30
Turn signal.....	3-29
Vehicle Dynamics Control OFF .....	3-23
Vehicle Dynamics Control operation .....	3-23
X-mode.....	3-30
Information display .....	3-31
Inside mirror .....	3-54
Interior lights .....	6-2

Internal trunk lid release handle.....	2-38
<b>J</b>	
Jack-up point .....	9-5
Jump starting .....	9-11
<b>K</b>	
Key.....	2-3
Number .....	2-3
Reminder chime .....	3-4
Replacement.....	2-5
Keyless access with push-button start system.....	2-10
Disabling keyless access functions .....	2-18
Locking and unlocking doors.....	2-13
Opening rear gate .....	2-16
Opening trunk .....	2-16
Warning chimes and warning indicator .....	3-24
When access key does not operate properly.....	9-18
Keyless entry system .....	2-23
<b>L</b>	
Leather seat materials.....	10-5
License plate light.....	11-46
Light	
Backup .....	11-44
Cargo area .....	6-3, 11-48
Control switch .....	3-42
Daytime running .....	3-45
Dome.....	6-2, 11-47
Door step .....	11-47
Front fog .....	3-47, 11-41

Front side marker.....	3-42
Ignition switch.....	3-4
License plate.....	11-46
Map .....	6-2, 11-47
Rear combination.....	11-42
Rear side marker light .....	11-42
Rear turn signal .....	11-42
Trunk.....	11-48
Turn signal.....	3-46, 11-41, 11-42
Vanity mirror.....	6-5
Loading your vehicle .....	8-12
Low fuel warning light.....	3-21
Low tire pressure warning light .....	3-17
Lower and tether anchorage.....	1-35
<b>M</b>	
Maintenance	
Precautions .....	11-3
Schedule .....	11-3
Seatbelt.....	1-24
Tips.....	11-5
Tools .....	9-3
Malfunction indicator light (check engine warning light) .....	3-15
Manual	
Climate control system .....	4-6
Mode (continuously variable transmission) .....	7-29
Seat.....	1-4
Transmission .....	7-23
Transmission oil.....	11-18, 12-7
Map light.....	6-2, 11-47
Maximum load limits .....	8-21

Meters and gauges.....	3-7
Mirror defogger .....	3-52
Mirrors .....	3-54
Moonroof.....	2-46
<b>N</b>	
New vehicle break-in driving .....	8-2
<b>O</b>	
Odometer .....	3-8
Off road driving .....	8-6
Oil filter .....	11-13, 12-6
Oil level	
Engine .....	11-11
Manual transmission .....	11-18
Warning light.....	3-16
Oil pressure warning light .....	3-16
Outside	
Mirror defogger .....	3-52
Mirrors .....	3-66
Temperature indicator .....	3-32
Overhead console .....	6-7
Overheating engine .....	9-13
<b>P</b>	
Parking .....	7-42
Brake.....	7-42
Tips .....	7-46
Periodic inspections .....	8-4
Petrol fuel.....	7-3
PIN Code Access .....	2-21

Pocket.....	6-7
Power	
Door locking switch .....	2-9
Outlets.....	6-9
Outside mirrors .....	3-66
Rear gate.....	2-40, 9-21
Seat .....	1-5
Steering.....	7-31
Steering warning light.....	3-22
Windows.....	2-32
Precautions against vehicle modification .....	1-27, 1-70
Preparing to drive .....	7-8
Printed antenna .....	5-2
Push-button	
Ignition switch.....	3-5
Starting and stopping engine .....	7-12
<b>R</b>	
Rear	
Combination lights.....	11-42
Differential gear oil .....	11-19, 12-7
Gate.....	2-39
Turn signal light .....	11-42
Rear seat.....	1-11
Armrest.....	1-15
Folding down.....	1-12
Head restraint adjustment .....	1-14
Reclining.....	1-11
Rear view camera.....	6-19
Rear window	
Defogger.....	3-52

Wiper and washer switch.....	3-51
Wiper blades.....	11-34
Recommended	
Brake fluid .....	12-8
Clutch fluid .....	12-8
Continuously variable transmission fluid .....	12-8
Engine oil .....	12-4
Front differential gear oil.....	12-7
Manual transmission oil.....	12-7
Rear differential gear oil .....	12-7
Spark plugs .....	12-9
Refueling.....	7-4
Remote engine start system .....	7-15
Remote keyless entry system .....	2-23
Replacement	
Brake pad and lining .....	11-23
Wiper blades.....	11-32
Replacing	
Access key battery .....	11-49
Air cleaner element.....	11-15
Lost transmitters (remote keyless entry system) .....	2-26
Remote engine start transmitter battery .....	7-21
Remote keyless entry transmitter battery .....	11-50
Replacing bulbs .....	11-39, 12-14
Backup light.....	11-44
Cargo area light .....	11-48
Dome light .....	11-47
Door step light .....	11-47
Front fog light.....	11-41
Front side marker light .....	11-41
Front turn signal light .....	11-41

Halogen headlight .....	11-39
HID headlight .....	11-39
License plate light .....	11-46
Map light.....	11-47
Rear combination light.....	11-42
Rear side marker light .....	11-42
Rear turn signal light .....	11-42
Trunk light.....	11-48
Rocking the vehicle .....	8-12
Roof rails with integrated cross bars .....	8-14
Rope hook .....	8-18
 <b>S</b>	
<b>Safety</b>	
Precautions when driving .....	3
Symbol .....	2
Warnings .....	2
<b>Seat</b>	
Fabric.....	10-5
Front .....	1-2
Heater .....	1-9
Height adjustment .....	1-4
Memory function .....	1-5
Power.....	1-5
Rear.....	1-11
<b>Seatbelt</b> .....	3, 1-16
Fastening .....	1-17
Maintenance.....	1-24
Pretensioners .....	1-24
Safety tips.....	1-16
Warning light and chime .....	3-12

<b>Security</b>	
Alarm system .....	2-27
Immobilizer .....	2-4
Indicator light .....	3-28
Shock sensors .....	2-31
<b>Select lever</b>	
Position indicator .....	3-29
Shift lock function .....	7-27
Shock sensors .....	2-31
Shopping bag hook.....	6-13
Snow tires .....	8-11, 11-24
Snowy and icy roads .....	8-10
Spark plugs .....	11-18, 12-9
Specifications.....	12-2
Speedometer .....	3-8
SRS airbag (Supplemental Restraint System airbag)....	3, 1-41
SRS airbag system	
Monitors .....	1-68
Servicing .....	1-69
Warning light.....	3-14
Starting & stopping engine.....	7-9, 7-12
State emission testing (U.S. only) .....	7-7
Steering responsive fog lights system .....	3-47
OFF indicator .....	3-30
Steering wheel	
Power .....	7-31
Tilt/telescopic .....	3-66
Stop light.....	12-15
Storage compartment.....	6-5
SUBARU Rear Vehicle Detection (SRVD).....	7-52
OFF switch .....	7-58

SRVD approach indicator light/warning buzzer.....	7-55	
Warning indicator .....	3-30, 7-57	
Sun shade .....	2-48	
Sun visors.....	6-4	
Supplemental Restraint System airbag (SRS).....	1-41	
Synthetic leather upholstery .....	10-5	
<b>T</b>		
Tachometer .....	3-9	
Temperature gauge .....	3-11	
Temperature warning light		
AT OIL TEMP .....	3-16	
Temporary spare tire .....	9-2	
Tether (child restraint system).....	1-35, 1-38	
Tie-down hooks .....	9-14	
Tire .....	11-24, 12-9	
Chains.....	8-11	
Inspection .....	11-26	
Pressures and wear .....	11-26	
Replacement .....	11-29	
Rotation.....	11-29	
Size and pressure .....	12-9	
Types .....	11-24	
Tire pressure monitoring system (TPMS).....	7-40, 9-10, 11-24	
Warning light .....	3-17	
Tires and wheels.....	11-24	
Tools .....	9-3	
Top tether anchorages .....	1-35, 1-38	
Towing .....	9-13	
All wheels on the ground .....	9-17	
Flat-bed truck .....	9-16	
Hooks .....	9-14	
Weight .....	8-21	
Trailer		
Connecting .....	8-19	
Hitch (Outback) .....	8-18, 8-25	
Towing .....	8-21	
Towing tips .....	8-26	
Trip meter.....	3-9	
Trunk lid .....	2-37, 9-19	
Release handle .....	2-38	
Trunk light .....	11-48	
Turn signal		
Indicator lights.....	3-29	
Lever .....	3-46	
<b>U</b>		
Under-floor storage compartment.....	6-19	
<b>V</b>		
Valet mode .....	2-31	
Vanity mirror .....	6-5	
Vehicle		
Capacity weight.....	8-13	
Identification .....	12-18	
Symbols .....	3	
Vehicle Dynamics Control		
OFF indicator light .....	3-23	
OFF switch .....	7-37	
Operation indicator light.....	3-22	
System.....	7-35	
Warning light.....	3-22	

Ventilator .....	4-2
<b>W</b>	
Warning and indicator lights .....	3-12
Warning chimes	
Keyless access with push-button start system .....	3-24
Seatbelt .....	3-12
Warning light	
ABS .....	3-18
Access key .....	3-24
All-Wheel Drive .....	3-21
AT OIL TEMP .....	3-16
Automatic headlight beam leveler .....	3-29
Brake system .....	3-19
Charge .....	3-15
CHECK ENGINE .....	3-15
Engine low oil level .....	3-16
Keyless access with push-button start system .....	3-24
Low fuel .....	3-21
Low tire pressure .....	3-17
Oil pressure .....	3-16
Power steering .....	3-22
Seatbelt .....	3-12
SRS airbag system .....	3-14
SUBARU Rear Vehicle Detection .....	3-30
Vehicle Dynamics Control .....	3-22
Windshield washer fluid .....	3-21
Warranties .....	1
Warranties and maintenance .....	8-21
Washing .....	10-2
Waxing and polishing .....	10-3

Wear indicators .....	11-28
Welcome lighting function .....	3-43
Wheel	
Aluminum .....	11-31
Balance .....	11-28
Nut tightening torque .....	12-9
Replacement .....	11-30
Windows .....	2-32
Windshield	
Washer fluid .....	11-31
Wiper and washer switches .....	3-50
Wiper blades .....	11-33
Wiper deicer .....	3-52
Winter	
Driving .....	8-8
Tires .....	8-11, 11-24
Wiper and washer .....	3-49
Wiper deicer .....	3-52
<b>X</b>	
X-mode .....	7-38
Indicator .....	3-30

